Installation




Descriptions

1 – Coordinator Parts

Information

Unwrap and confirm all parts are accounted for.

Installation

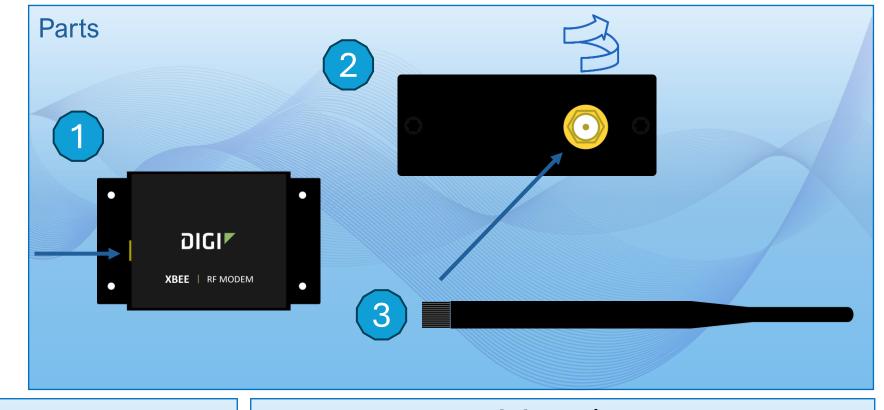

Descriptions


- 1 Coordinator
- 2 RF Connection
- 3 Antenna Connection

Information

- Flip the Coordinator on it side to access the RF Connector.
- Connect the Antenna to the RF Connector.
- Twist Clockwise until hand tight. Do not over tighten.



Installation

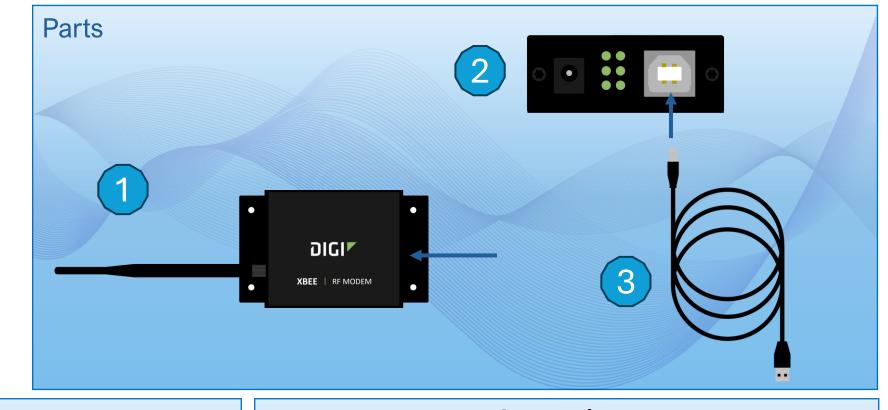


Descriptions

- 1 Coordinator
- 2 USB Port
- 3 USB Cord Connection

- Flip the Coordinator to the opposite side of the Antenna to access the USB Port.
- Insert the USB Cord into the Port on the Coordinator.

Installation

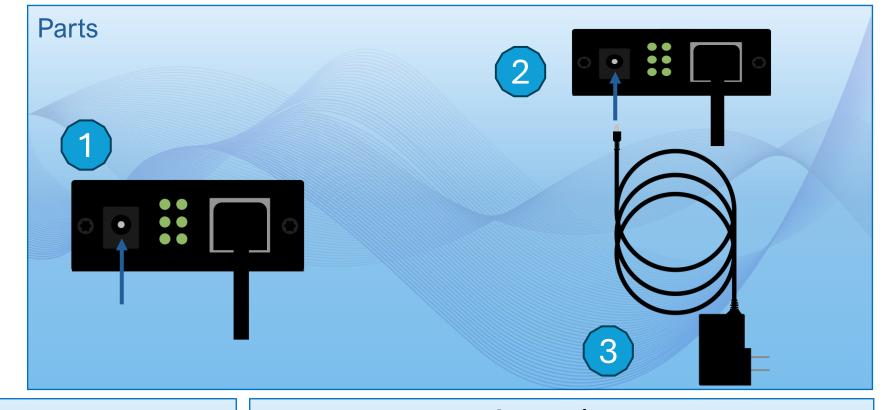


Descriptions

- 1 Power Connection
- 2 Power Cord Connection
- 3 Power Cord

- On the left side of the USB Port there is a power connection.
- Insert the barrel end of the Power Cord into the connector.



Installation

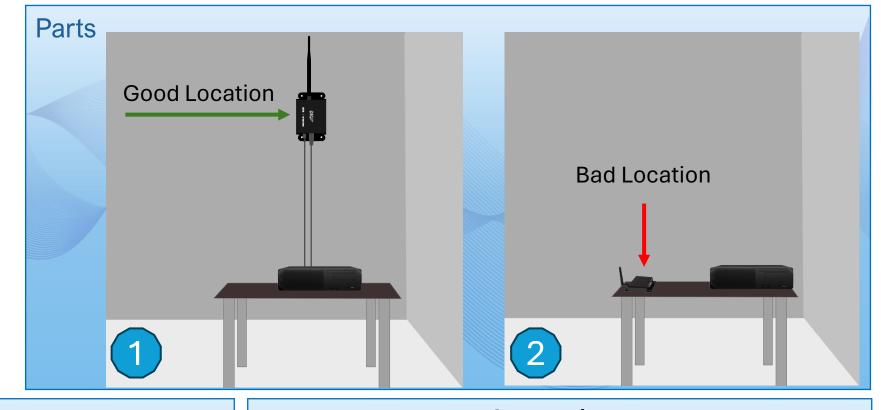


Descriptions

- 1 Good Location
- 2 Bad Location

- The Coordinator needs to be placed in a vertical position on a wall or other surface.
- It should be placed as high as possible on the surface.
 - Limited by the Server location, Power Cord and USB Cord length.
- Do not place the Coordinator on a desktop or other low surface.
 - Signal strength will be very weak and cause issues.



Installation

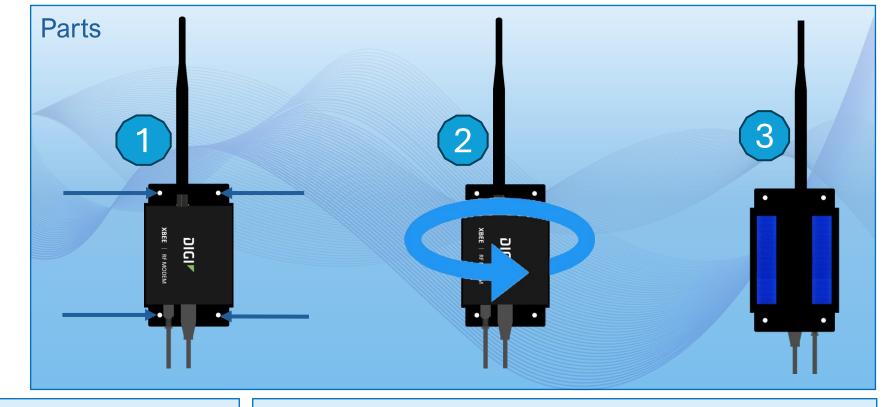


Descriptions

- 1 Screw Locations
- 2 Velcro Location

- To mount the Coordinator on a surface, the pre-made holes on the device can be used to screw/anchor it to the wall.
- As the Coordinator does not have a large weight, a
 Velcro strip attached to the back of the device will work.

Installation

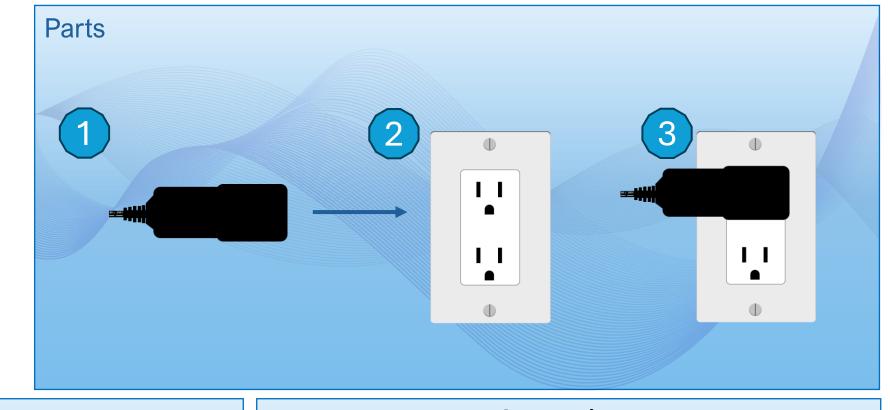

Descriptions

- 1 Coordinator Power Cord
- 2 110v Outlet
- 3 Power Connection

- On the left side of the USB Port there is a power connection.
- Insert the barrel end of the Power Cord into the connector.